

LARGE WHEEL WITHOUT BRAKE




















USER INSTRUCTIONS

FOR LITE, STURDY,
PUSH AND MINI



WARNINGS

PLEASE READ BEFORE USING THE PRODUCT



-  **WARNING!** A child's safety is your responsibility.
-  **WARNING!** Read the instructions BEFORE use.
Keep these instructions for future reference.
-  **WARNING!** Never leave a child unattended.
It may be dangerous to leave your child unattended.
-  **WARNING!** This wagon is not intended for children under 3 years.
-  **WARNING!** Maximum load of the BEACHWAGON LITE is 80 KG.
Never overload.
-  **WARNING!** Never let a person stand in the wagon.
-  **WARNING!** This wagon is not suitable for running or skating.
-  **WARNING!** Assembly of the BEACHWAGON LITE by adults only!
-  **WARNING!** This wagon should be used with caution, since skill is required
to avoid falls or collisions causing injury to the user or third parties!
-  **WARNING!** Do not attach the wagon to any other vehicle, car, bicycle, motor or animal.
Do not use on highway. Only use for walking. Maximum speed 10 KM per hour.
-  **WARNING!** Always use this wagon with care to avoid injury, falling and collision.
-  **WARNING!** Always divide the load evenly over the wagon.
Overloading on one side might cause tilting of the wagon.
-  **WARNING!** When the wagon is used in the sun, there is a hazard of sun burn.
Use sun protection for children.
-  **WARNING!** Keep flames and heat away from the wagon.
-  **WARNING!** This wagon requires regular maintenance by the user.
See the maintenance instruction in this manual.
-  **WARNING!** Ensure that all accessories are engaged/constructed according
the advised instructions in the manual of these accessories before use.
-  **WARNING!** To avoid injury ensure that your child is kept away from the wagon
when unfolding and folding this wagon.
-  **WARNING!** Keep plastic covers and bags away from children to avoid suffocation
and hazard.
-  **WARNING!** Children should be kept on a distance of moving parts while
making adjustments.

DISASSEMBLE

1.

DISASSEMBLE WHEEL

Be sure to remove the safety pin before removing the axle from the wheel.

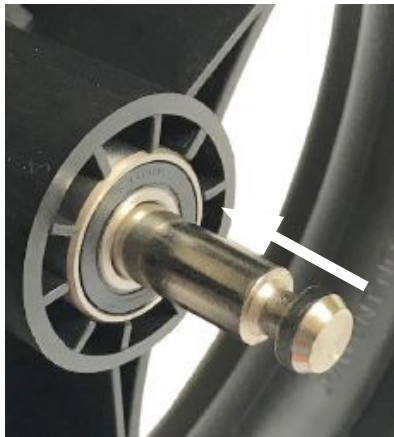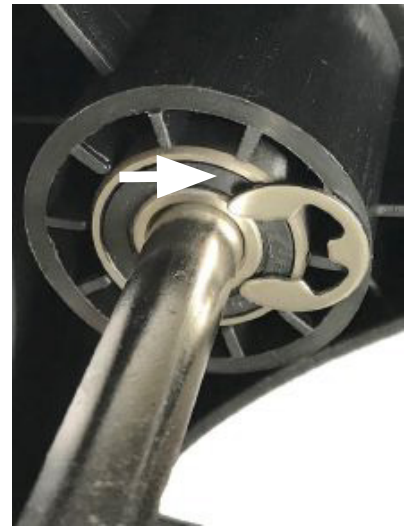


DISASSEMBLE

MOUNTING & REMOVING LARGE WHEELS

1.

MOUNTING WHEELS


Slide wheel axle (A) completely into frame axle (B). Locking button (C) will automatically lock the wheel. Check proper locking by pulling wheel in direction (D).

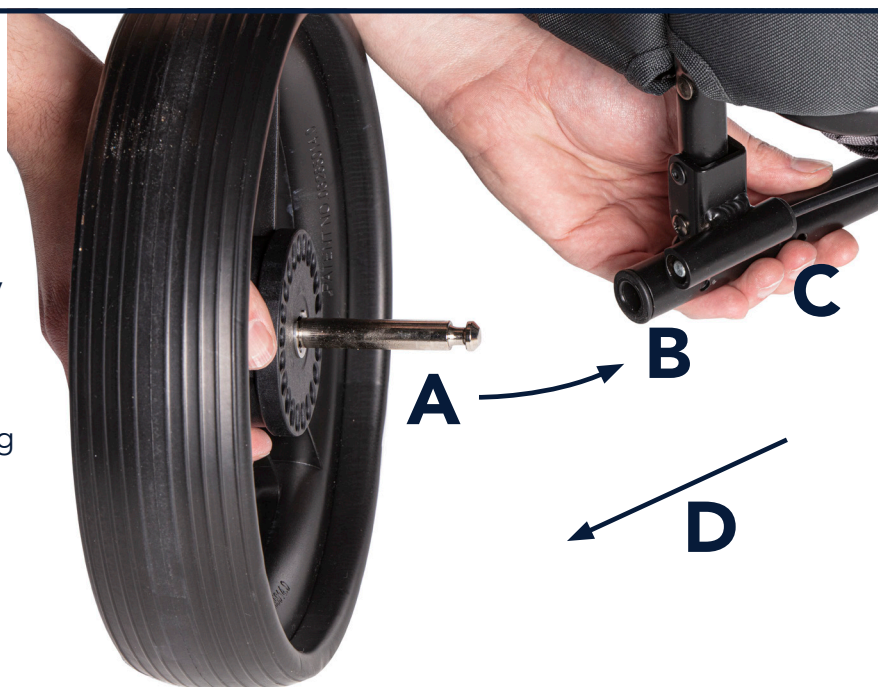

2.

REMOVING WHEELS

Push button (A) and pull out wheel in outside direction of axle (B).

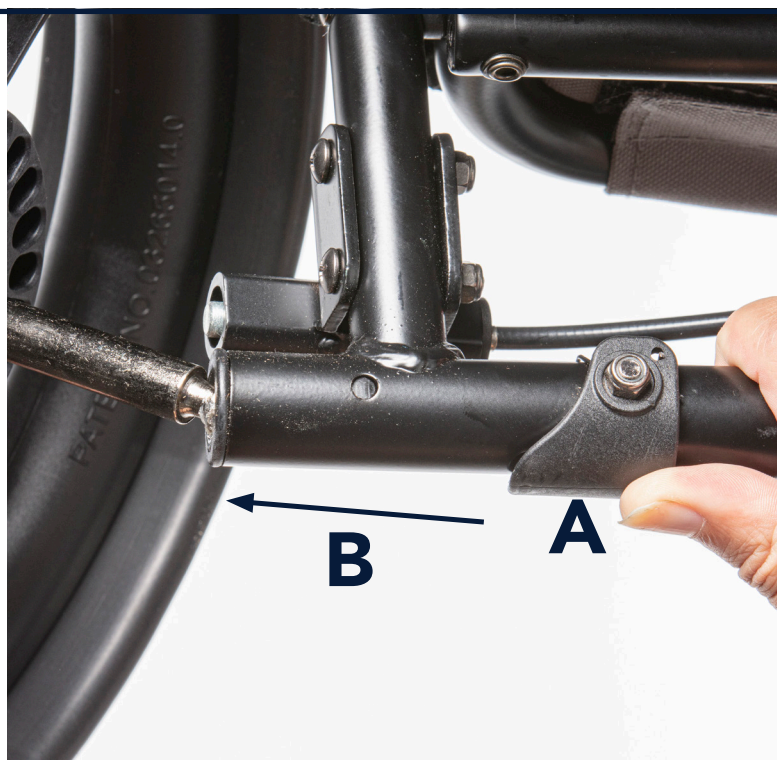



**BE SURE TO CHECK OUT OUR WIDE
RANGE OF ACCESSOIRES!**



**AND MUCH MORE AT
WWW.BEACHWAGONSTROLLERS.COM**